

2D beam optics (Section 3.3.3, 3.3.5, 3.6.1, and 3.6.2)

Volker Ziemann, 211106, CC-BY-SA-4.0

In accelerators the elements, such as a magnet or the beam pipe between the magnets, follow one another and we represent them as lines in an array that describes this sequence. We describe drift space with a code=1 in the first column and thin quadrupoles by code=2. The second column contains the number the line is repeated internally, the third column displays the length of the element and the fourth column the strength. For a thin quadrupole the latter is specified as its focal length F . Summarizing

- First column: code, drift=1, quad=2
- Second column: repeat code for the element
- Third column: length of one segment
- Fourth column: strength of one segment, focal length for a thin quadrupole.

A simple FODO cell that starts in the middle of the drift space before the defocusing quadrupole is thus defined in the following array, named `fodo`, where the focal length is defined as $F=2.1$. Just below the definition of `fodo` we define the `beamline` as 20 copies of `fodo` stacked on top of each other.

```
global beamline sigma0 % needed for some functions.
F=2.1; % focal length of the quadrupoles
fodo=[ 1, 5, 0.2, 0; % 5* D(L/10)
       2, 1, 0.0, -F; % QD
       1, 10, 0.2, 0; % 10* D(L/10)
       2, 1, 0.0, F; % QF/2
       1, 5, 0.2, 0] % 5* D(L/10)
```

```
fodo = 5x4
    1.0000    5.0000    0.2000         0
    2.0000    1.0000         0   -2.1000
    1.0000   10.0000    0.2000         0
    2.0000    1.0000         0    2.1000
    1.0000    5.0000    0.2000         0
```

```
beamline= repmat(fodo,20,1) %name must be 'beamline'
```

```
beamline = 100x4
    1.0000    5.0000    0.2000         0
    2.0000    1.0000         0   -2.1000
    1.0000   10.0000    0.2000         0
    2.0000    1.0000         0    2.1000
    1.0000    5.0000    0.2000         0
    1.0000    5.0000    0.2000         0
    2.0000    1.0000         0   -2.1000
    1.0000   10.0000    0.2000         0
    2.0000    1.0000         0    2.1000
    1.0000    5.0000    0.2000         0
    ⋮
```

Now calculate all the transfer matrices with the function `calcmat()` that is defined in the appendix

```
[Racc,spos,nmat,nlines]=calcmat(beamline);
```

Then we allocate memory to store the positions after each segment that we want to display later

```
data=zeros(1,nmat);    % allocate memory
```

and define the input state `x0`, which contains the starting position and angle


```
x0=[0.001;0];          % 1 mm offset at start
```

before mapping the input `x0` to the state vector `x` at the end of each segment along the beam line

```
for k=1:nmat
    x=Racc(:,k)*x0;
    data(k)=x(1);      % store the position
end
```

and annotate the axes

```
plot(spos,1e3*data,'k'); % 1e3 to convert to mm
xlabel('s [m]');
ylabel('x [mm]');
title('Trajectory')
xlim([spos(1),spos(end)])
```

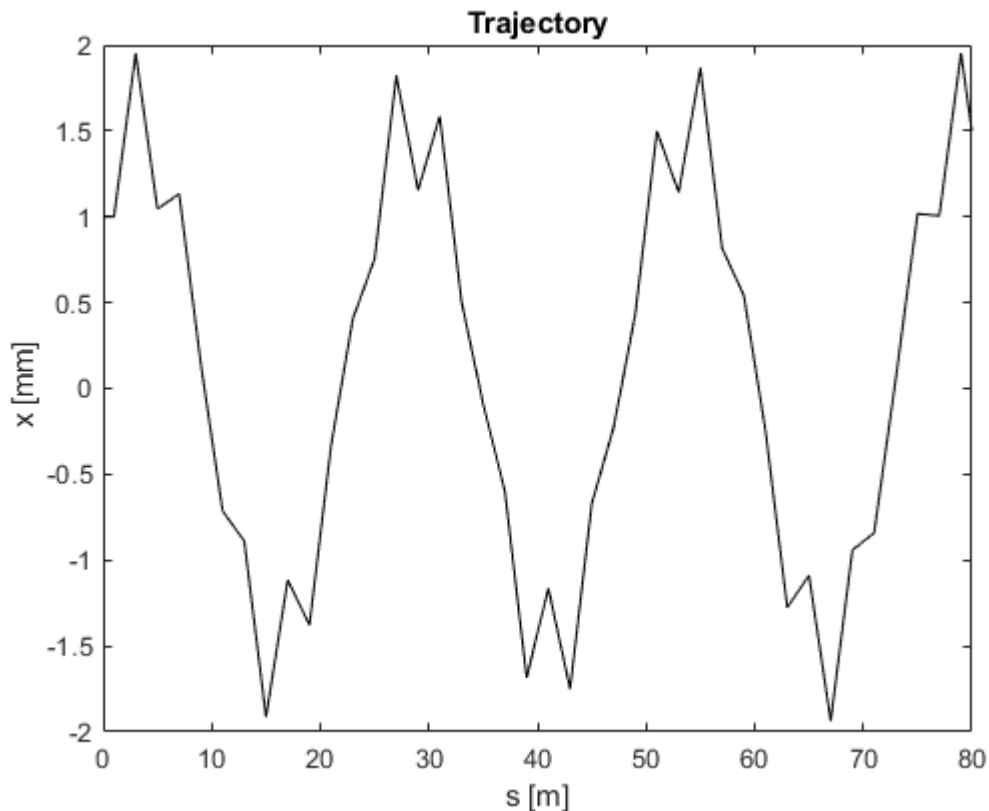

Beta functions

Now we are ready to calculate the beta functions along the beamline. Let's first calculate the transfer matrices for a single fodo cell.

```
beamline=fodo;           % just a single FODO cell
[Racc,spos,nmat,nlines]=calcmat(beamline);
Rend=Racc(:, :,end);     % the TM from start to end
```

and the periodic Twiss parameters α , β , and γ

```
[Qtune,alpha0,beta0,gamma0]=R2beta(Rend)
```

```
Qtune = 0.1580
alpha0 = 1.1372
beta0 = 4.2348
gamma0 = 0.5415
```

where we observe that Qtune is 0.1580. Change the focal length F way up in this script to a different value and observe how Qtune changes.

We now use the Twiss parameters to construct the **initial** beam matrix sigma0

```
sigma0=[beta0,-alpha0;-alpha0,gamma0]
```


```
sigma0 = 2x2
    4.2348    -1.1372
   -1.1372     0.5415
```

and map this through one FODO cell

```
data=zeros(1,nmat);    % allocate memory
for k=1:nmat
    sigma=Racc(:, :,k)*sigma0*Racc(:, :,k)';
    data(k)=sigma(1,1); % that's the beta
end
```

and plot the beta function through one FODO cell

```
plot(spos,data,'k')
xlabel('s [m]'); ylabel('\beta [m]')
title('Beta function in one FODO cell')
```

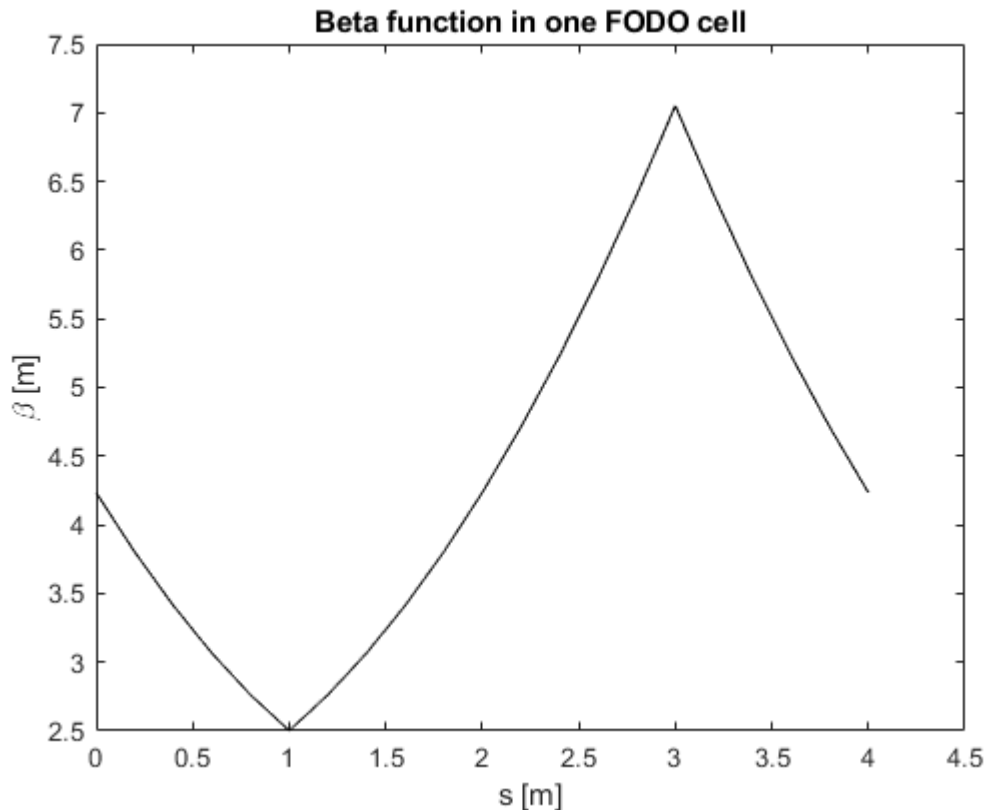

We observe an oscillation with a minimum at the location of the defocusing quadrupole at $s=1$ m and a maximum in the focusing quadrupole at $s=3$ m.


Betafunction through ten FODO cells

Mapping the beta function through 10 FODO cells makes it necessary to increase the length of the `beamline` and update all transfer matrices

```
beamline= repmat(fodo,10,1);
[Racc,spos,nmat,nlines]=calcmat(beamline);
```

We do not need to re-calculate `sigma0`, because it is periodic and we can therefore use the one determined from a single cell. Let's propagate the beta function `sigma0` through the 10 FODO cells and plot the result

```
data=zeros(1,nmat);    % allocate memory
for k=1:nmat
    sigma=Racc(:,:,k)*sigma0*Racc(:,:,k)';
    data(k)=sigma(1,1); % that's the beta
end
plot(spos,data,'k')
xlabel('s [m]'); ylabel('\beta [m]')
title('Beta function in ten FODO cells')
```

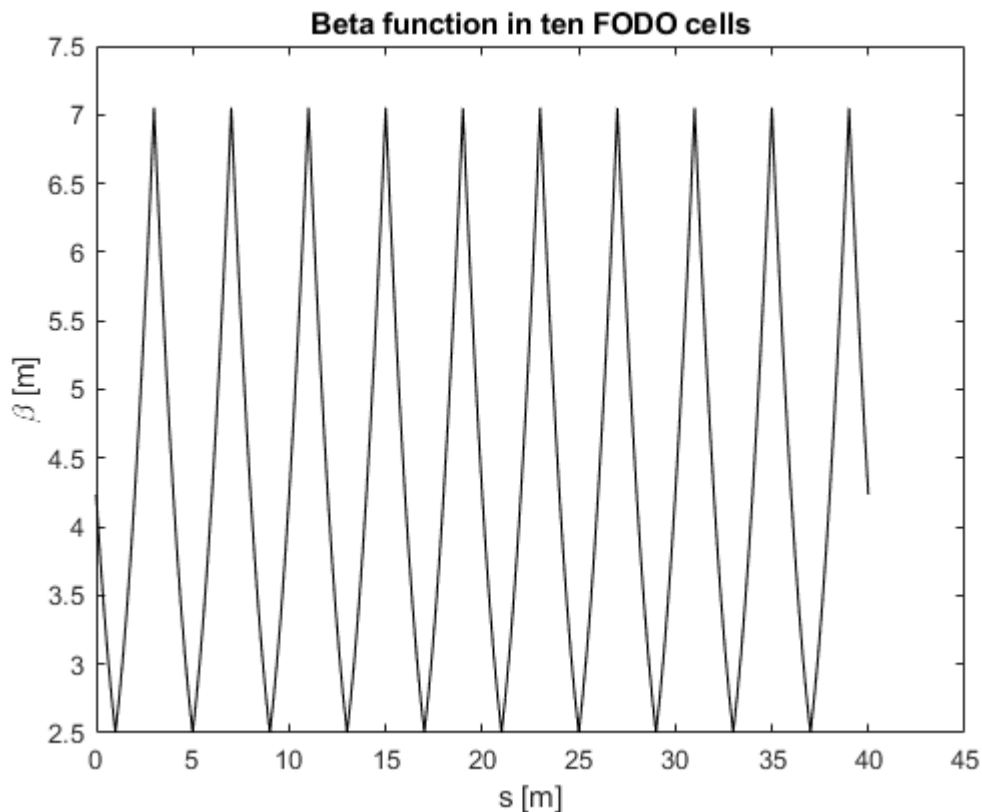

It's just ten copies of the beta function through a single cell.

Adjust Qtune to 0.25

Let's go back to a single cell and adjust the quadrupoles such that the tune for one cell is $Q_{\text{tune}}=0.25$. Which focal length approximately does the job? Try to set the tune to $0.16666=1/6$. What is F in that case?

```
3.356% adjust focal length F
```

```
ans = 3.3560
```

```
F=ans; % focal length of the quadrupoles
fodo=[ 1, 5, 0.2, 0;
       2, 1, 0.0, -F; % QD
       1, 10, 0.2, 0;
       2, 1, 0.0, F; % QF/2
       1, 5, 0.2, 0];
beamline=fodo;
[Racc,spos,nmat,nlines]=calcmat(beamline);
Rend=Racc(:, :, end);
[Qtune,alpha0,beta0,gamma0]=R2beta(Rend)
```

```
Qtune = 0.0963
alpha0 = 1.0476
beta0 = 6.7193
gamma0 = 0.3122
```

Automatic tune adjustment

Now we use `fminsearch()` to set the tune to a desired value. To do so we need to define a cost function that I often call χ^2 or `chisq`. Here we use the name `chisq_tune()`. It receives a guess for the focal length F and returns the difference between the tune value for that F and the desired tune, here 0.25. Such a function is defined in the appendix.

```
% global beamline % needed to make it available inside chisq_tune()
F0=3; % starting guess
[Fnew,fval]=fminsearch(@chisq_tune,F0)
```

```
Fnew = 1.4142
fval = 1.9933e-11
```

```
beamline % just look at the new beamline description
```

```
beamline = 5x4
    1.0000    5.0000    0.2000         0
    2.0000    1.0000         0   -1.4142
    1.0000   10.0000    0.2000         0
    2.0000    1.0000         0    1.4142
    1.0000    5.0000    0.2000         0
```

F_{new} is the new focal length that will give you the desired tune. let's verify that

```
[Racc,spos,nmat,nlines]=calcmat(beamline);
Rend=Racc(:, :,end);
Qtune=R2beta(Rend)
```

```
Qtune = 0.2500
```

Now look at the function `chisq_tune()` in the appendix and change it such that Q_{tune} becomes $1/6$. What value for the focal length do you find?

Matching FODO cells with $Q_{\text{tune}}=0.1666$ to those with $Q_{\text{tune}}=0.25$

This is also called matching 60° cell to a 90° cell, because of $60^\circ/360^\circ = 0.1666$ and $90^\circ/360^\circ = 0.25$.

We found in the previous matching exercise that $F = \sqrt{2}$ gave $Q_{\text{tune}}=0.25$ and $F = 2$ gave $Q_{\text{tune}}=0.1666$, which allows us to define the two cells in the following way

```
F=2; % focal length of the quadrupoles
fodo60=[ 1, 5, 0.2, 0;
         2, 1, 0.0, -F; % QD
         1, 10, 0.2, 0;
         2, 1, 0.0, F; % QF/2
         1, 5, 0.2, 0];
F=sqrt(2);
fodo90=[ 1, 5, 0.2, 0;
         2, 1, 0.0, -F; % QD
         1, 10, 0.2, 0;
         2, 1, 0.0, F; % QF/2
         1, 5, 0.2, 0];
```

Let's look at the beta function along that beamline. To do so we first calculate the periodic beam matrix for the 90° cell

```
beamline=fodo60;
[Racc,spos,nmat,nlines]=calcmat(beamline);
Rend=Racc(:, :,end);
[Qtune,alpha60,beta60,gamma60]=R2beta(Rend)
```


```
Qtune = 0.1667
alpha60 = 1.1547
beta60 = 4.0415
gamma60 = 0.5774
```

```
sigma60=[beta60,-alpha60;-alpha60,gamma60]
```

```
sigma60 = 2x2
    4.0415    -1.1547
   -1.1547     0.5774
```


Now let's build a long beamline, starting with two fodo60, followed by six fodo90 cells and display the betafunction along this beam line, if we start with the input beam sigma60

```
beamline=[fodo60;fodo60;repmat(fodo90,6,1)];
[Racc,spos,nmat,nlines]=calcmat(beamline);
data=zeros(1,nmat);    % allocate memory
for k=1:nmat
    sigma=Racc(:, :,k)*sigma60*Racc(:, :,k)';
    data(k)=sigma(1,1);
end
plot(spos,data,'k'); xlabel('s [m]'); ylabel('\beta [m]')
title('Unmatched fodo60 to fodo90 transition')
```

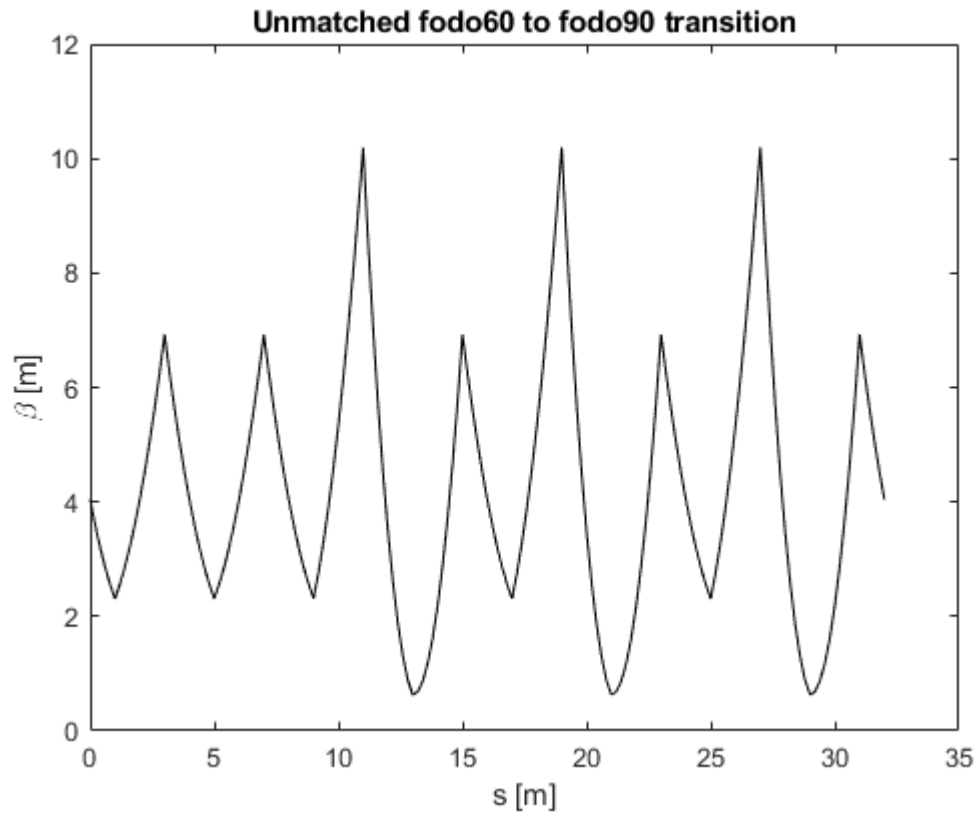

We observe that the beam that is matched for the fodo60 cell does not show a regular pattern once it enters the fodo90 cells. We therefore try to adjust the two quadrupoles in the second fodo60 cell to try to minimize the irregularity. Note that these two quads are now in line 7 and 9, respectively. The second cell we refer to as the *matching cell*.

```
beamline(7,4)=-2.044;
beamline(9,4)=2.0934;
[Racc,spos,nmat,nlines]=calcmat(beamline);
data=zeros(1,nmat);    % allocate memory
for k=1:nmat
    sigma=Racc(:,:,k)*sigma60*Racc(:,:,k)';
    data(k)=sigma(1,1);
end
plot(spos,data,'k'); xlabel('s [m]'); ylabel('\beta [m]'); ylim([0,10])
title('Matching by hand')
```

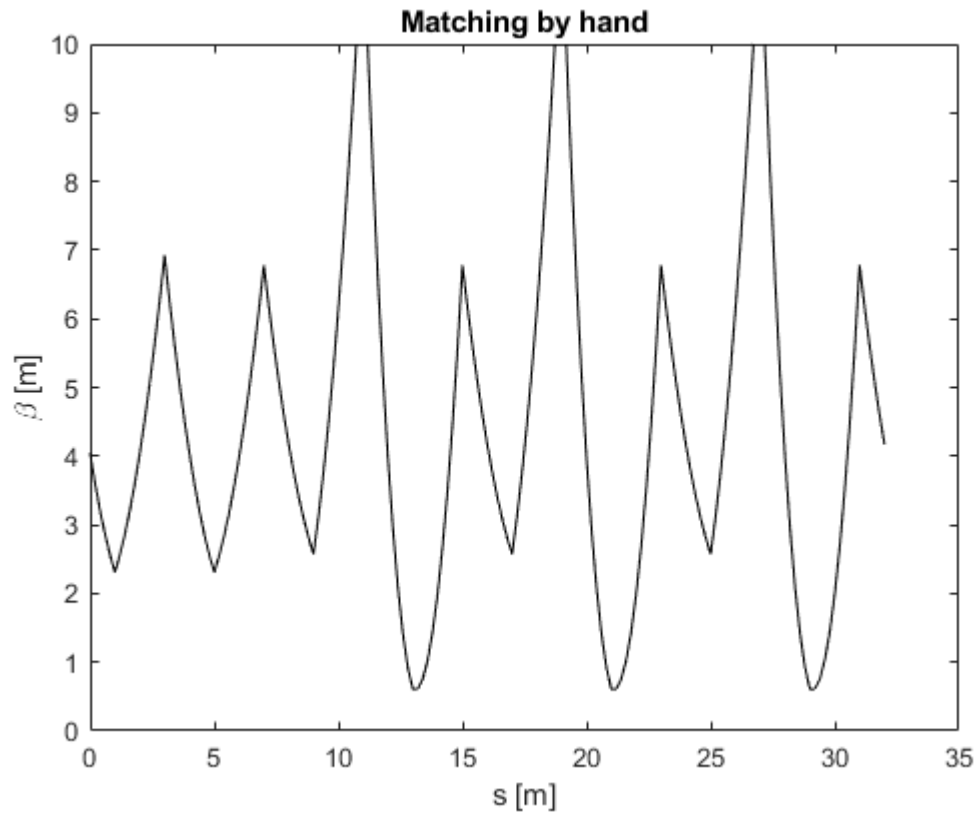Did you manage to get a smooth and periodic beta function through the downstream part of the beamline? If not, try out the following code, which uses `fminsearch()` to adjust the two quads such that α and β at the start become those of the downstream 90° cells at the start of the third cell at $s=8$ m, which is the first 90° cell.

Automatic matching

Let us first find out what α and β at the start of the 90° cells is

```
beamline=fodo90;
[Racc,spos,nmat,nlines]=calcmat(beamline);
Rend=Racc(:, :, end);
[Qtune,alpha90,beta90,gamma90]=R2beta(Rend)
```

```
Qtune = 0.2500
alpha90 = 1.4142
beta90 = 3
gamma90 = 1.0000
```

We find that $\beta = 3$ m and $\alpha = \sqrt{2}$. Now we need to define a `chisq_beta()` function that takes the two focal lengths for the two quadrupoles as input and returns the squared difference between the calculated beta function at the end of the matching cell and those of the downstream 90° cells. Let's base the matching cell on the 90° cell

```
sigma0=sigma60; % use sigma60 as starting matrix "global sigma0"
beamline=fodo90;
F0=[-2,2]; % initial guesses
```


```
[F,fval]=fminsearch(@chisq_beta,F0)
```

```
F = 1x2  
    -2.0294    1.6602  
fval = 2.3561e-09
```

```
matching=beamline;    % save the resulting beamline as matching cell
```

And now we can reassemble the beamline consisting of one fodo60 cell, a matching cell, and four fodo90 cells, calculate the transfer matrices and plot the beta functions.

```
beamline=[fodo60;matching;repmat(fodo90,4,1)];  
[Racc,spos,nmat,nlines]=calcmat(beamline);  
data=zeros(1,nmat);    % allocate memory  
for k=1:nmat  
    sigma=Racc(:, :,k)*sigma60*Racc(:, :,k)';  
    data(k)=sigma(1,1);  
end  
plot(spos,data,'k'); xlabel('s [m]'); ylabel('\beta [m]'); ylim([0,10])  
title('After automatic matching')
```

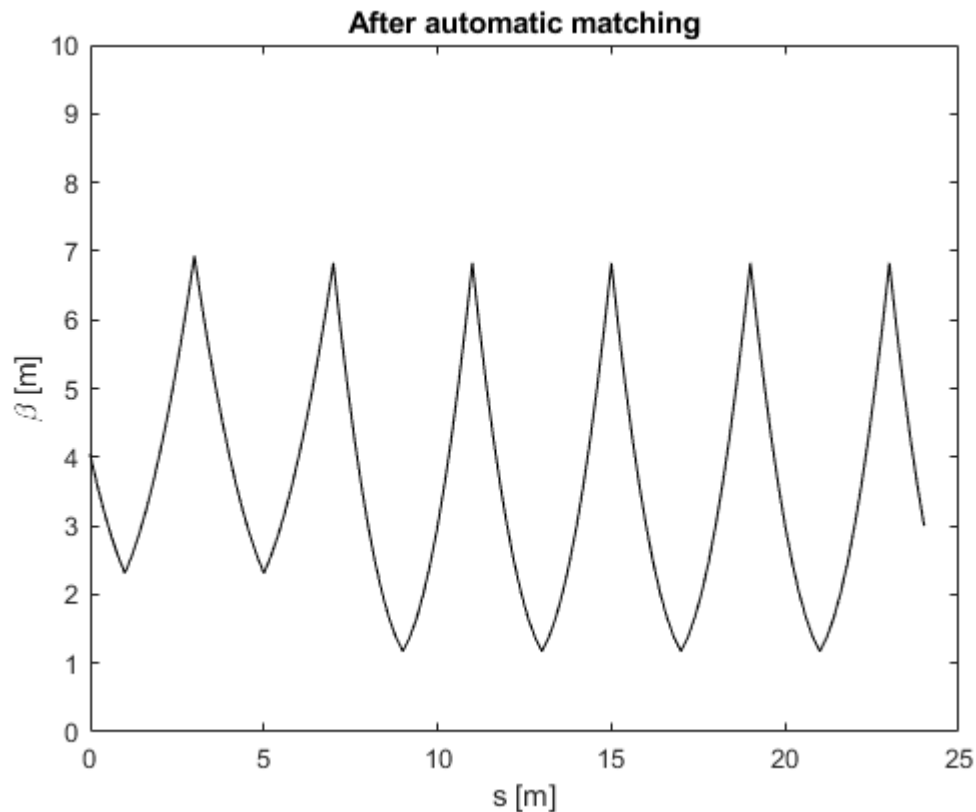

And that concludes this quick tutorial. Please do also have a look at the service functions in the Appendix below. They generate the transfer matrices, translate a transfer matrix to Twiss parameters, and calculate the chisq for the automatic matching of the tune and the beta function, respectively.

Appendix

Transfer matrix for a drift space $D(L)$

The following receives the length L of a drift space and returns the 2x2 transfer matrix `out` for a drift space

```
function out=D(L)
    out=[1,L;0,1];
end
```

Transfer matrix for a thin-lens quadrupole $Q(F)$

The following receives the length L of a drift space and returns the 2x2 transfer matrix `out` for a drift space

```
function out=Q(F)
out=eye(2);
if abs(F)<1e-8, return; end    % turn off, if F=0
out=[1,0;-1/F,1];            % transfer matrix
end
```

The function `calcmat()` to calculate all transfer matrices

The following function receives the beamline description as input and returns

- `Racc(2,2,nmat)`: transfer matrices from the start to the each of each segment, such that `R(:,end)` is the transfer matrix from the start to the end of the beamline.
- `spos`: position along the beamline after each segment, useful when plotting.
- `nmat`: number of segments
- `nlines`: number of lines in the beamline

```
% calcmat.m, calculate the transfer-matrices
function [Racc,spos,nmat,nlines]=calcmat(beamline)
ndim=size(D(1),1);
nlines=size(beamline,1);    % number of lines in beamline
nmat=sum(beamline(:,2))+1;    % sum over repeat-count in column 2
Racc=zeros(ndim,ndim,nmat);  % matrices from start to element-end
Racc(:,:,1)=eye(ndim);       % initialize first with unit matrix
spos=zeros(nmat,1);          % longitudinal position
ic=1;                        % element counter
for line=1:nlines             % loop over input elements
    for seg=1:beamline(line,2) % loop over repeat-count
        ic=ic+1;              % next element
        Rcurr=eye(2);         % matrix in next element
        switch beamline(line,1)
            case 1 % drift
                Rcurr=D(beamline(line,3));
            case 2 % thin quadrupole
                Rcurr=Q(beamline(line,4));
            otherwise
                disp('unsupported code')
        end
        Racc(:,:,ic)=Rcurr*Racc(:,:,ic-1); % concatenate
        spos(ic)=spos(ic-1)+beamline(line,3); % position of element
    end
end
```

```
end
end
```

R2beta()

The function R2beta() receives a transfer matrix R as input and returns the "tune" $Q = \mu/2\pi$ for the transfer matrix R, as well as the periodic Twiss parameters α , β , and γ .

```
function [Q,alpha,beta,gamma]=R2beta(R)
mu=acos(0.5*(R(1,1)+R(2,2)));
if (R(1,2)<0), mu=2*pi-mu; end
Q=mu/(2*pi);
beta=R(1,2)/sin(mu);
alpha=(0.5*(R(1,1)-R(2,2)))/sin(mu);
gamma=(1+alpha^2)/beta;
end
```

chisq_tune()

This function receives a guess for the focal length F and calculates the squared difference between the desired tune and tune for this F.

```
function chisq=chisq_tune(F)
global beamline sigma0
beamline(2,4)=-F;      % set the two quadrupoles, here QD
beamline(4,4)=F;      % and here QF
[Racc,spos,nmat,nlines]=calcmat(beamline); % update transfer matrices
Rend=Racc(:, :,end); % the last one
[Qtune,alpha0,beta0,gamma0]=R2beta(Rend); % get Qtune
chisq=(Qtune-0.25)^2; % difference to minimize
end
```

chisq_beta()

This function receives the focal lengths of the two quads in the matching cell and returns the squared difference between α and β for the 90° cell and the one derived from the provided quad values

```
function chisq=chisq_beta(F)
global beamline sigma0
beamline(2,4)=F(1); % set the two quadrupoles, here QD
beamline(4,4)=F(2); % and here QF
[Racc,spos,nmat,nlines]=calcmat(beamline); % update transfer matrices
Rend=Racc(:, :,end);
sigma=Rend*sigma0*Rend';
beta=sigma(1,1); alpha=-sigma(1,2);
beta90=3; alpha90=sqrt(2);
chisq=(beta-beta90)^2+(alpha-alpha90)^2;
end
```